

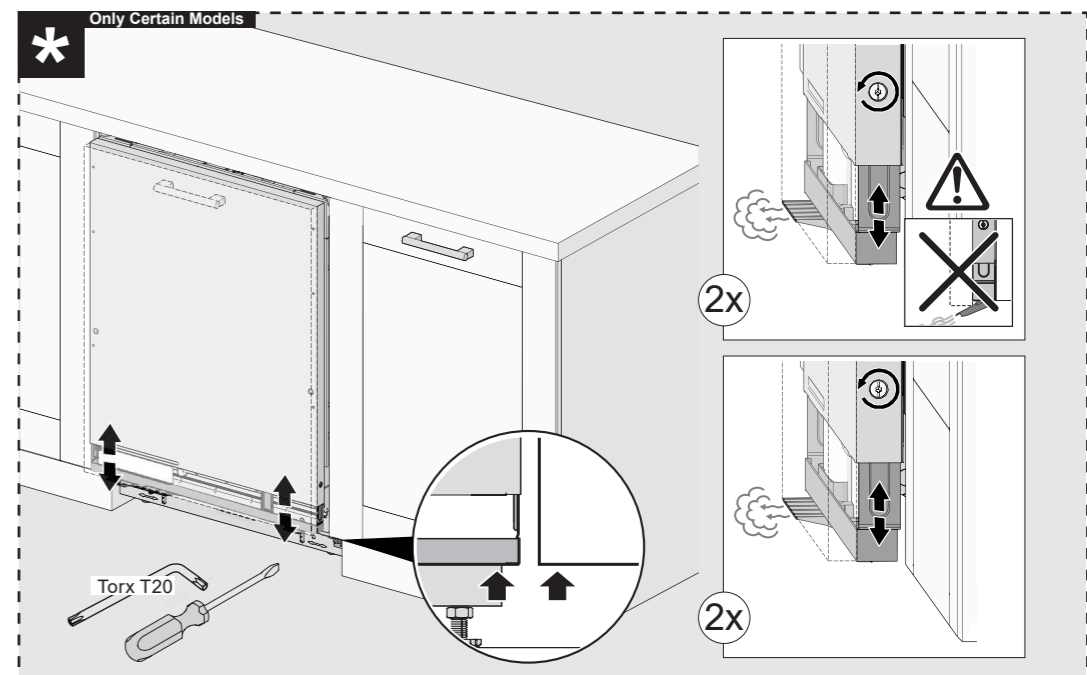
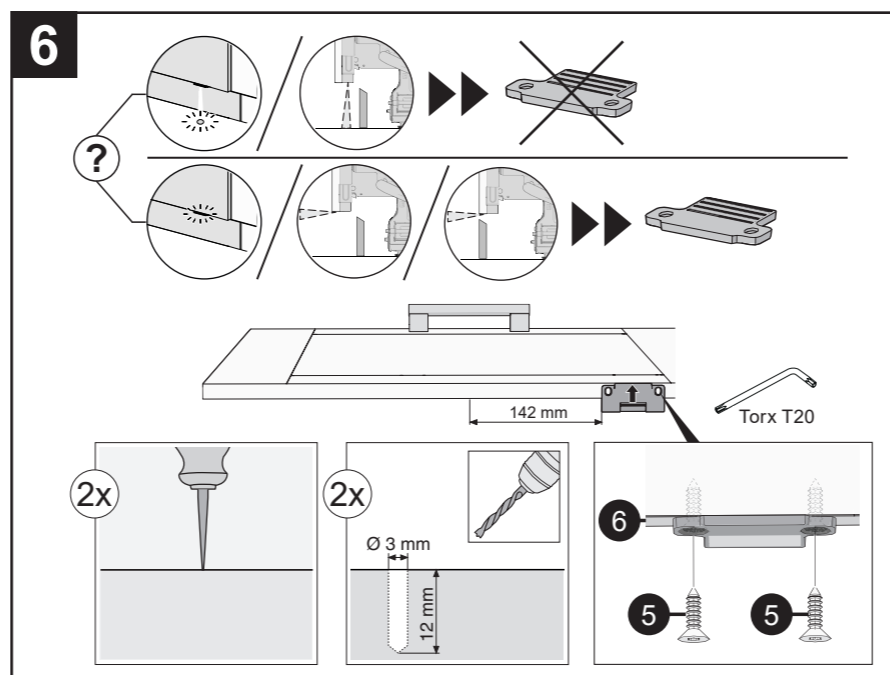
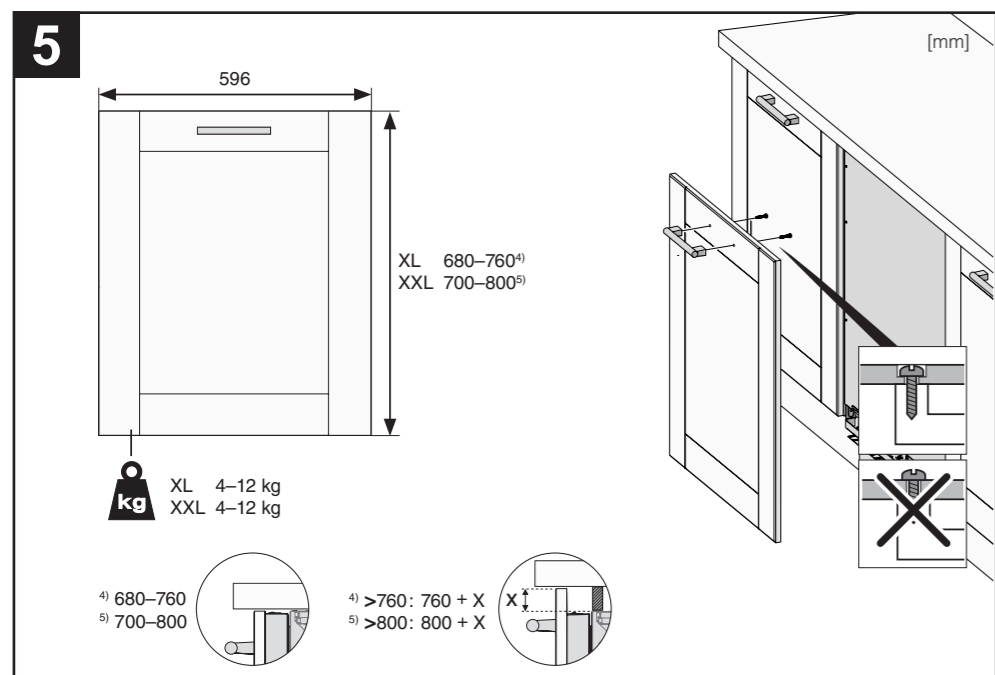
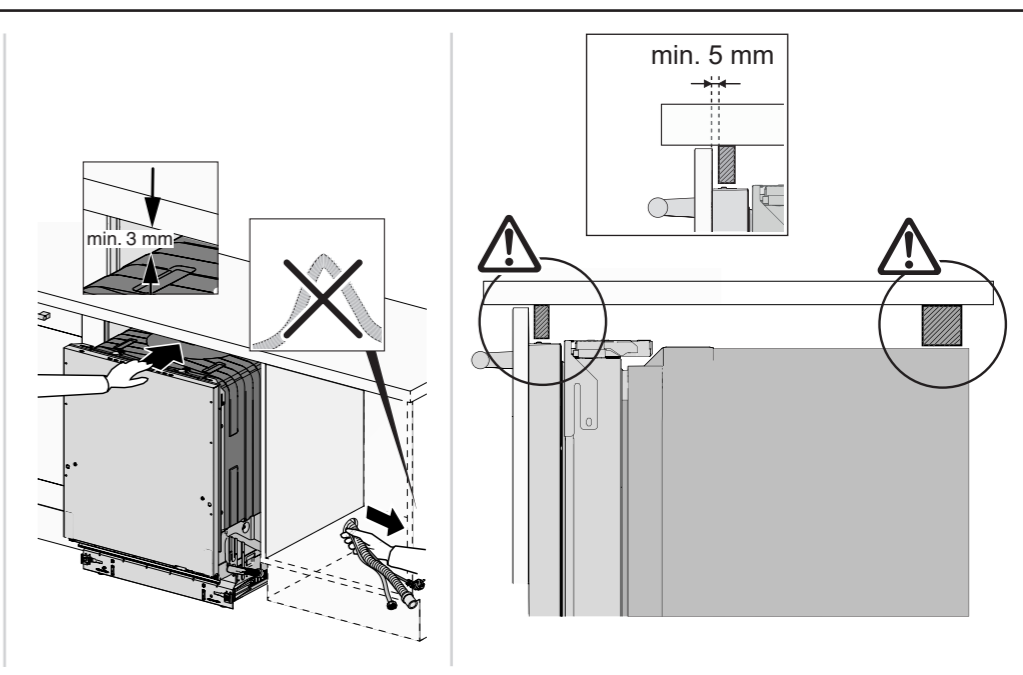


*** EN Only certain models.**
If the following parts are not supplied with your dishwasher, they are not intended for your specific model.

AR في موديلات معينة	IT Solo per alcuni modelli.	RO Numai la anumite modele.
BG Само определени модели.	RU Только в некоторых моделях.	SK Iba niektoré modely.
CS Pouze některé modely.	MK Само кај одредени модели.	SL Samo nekateri modeli.
ZH-CN 仅限部分机型。	LT Tik tam tikri modeliai.	SQ Vetëm disa modele të caktuara.
ZH-TW 僅限部分型號。	LV Vienīgi noteiktiem modeļiem.	SR Samo neki modeli.
DA Kun visse modeller.	NL Alleen bepaalde modellen.	SV Endast vissa modeller.
DE Nur bei bestimmten Modellen.	NO Bare enkelte modeller.	UK Тільки в деяких моделях.
ES Sólo se aplica a determinados modelos.	PL Dotyczy tylko wybranych modeli.	
ET Ainult teatud mudelite.		
FA فقط بعضی از مدل ها.		
FI Vain tietyt mallit.		
FR Uniquement pour certains modèles.		
HR Samo na nekim modelima.		
HU Csak bizonyos modellek esetében.		

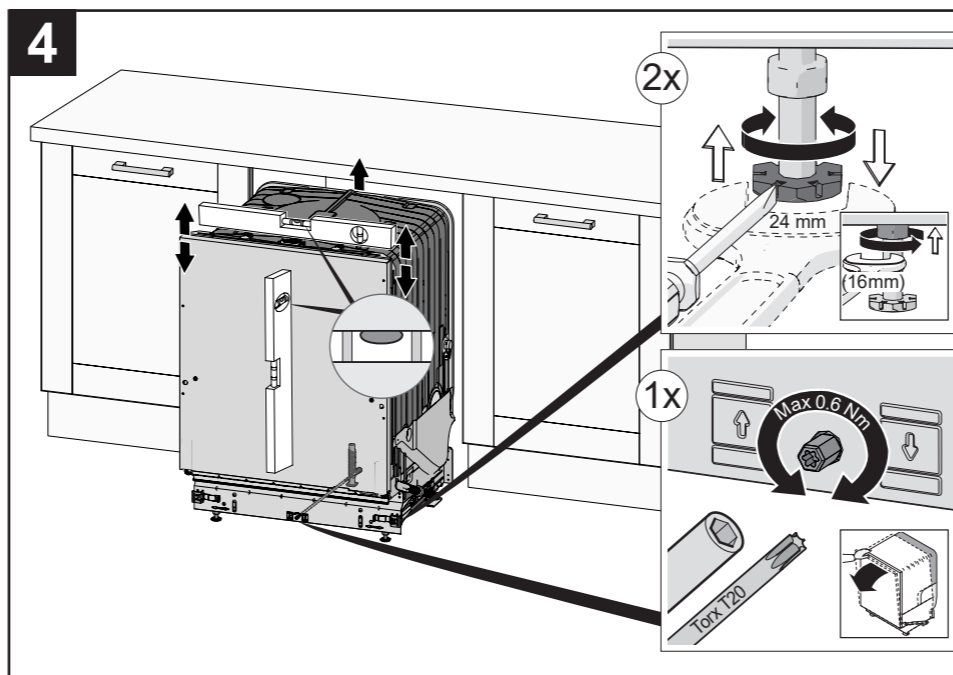

934017-05

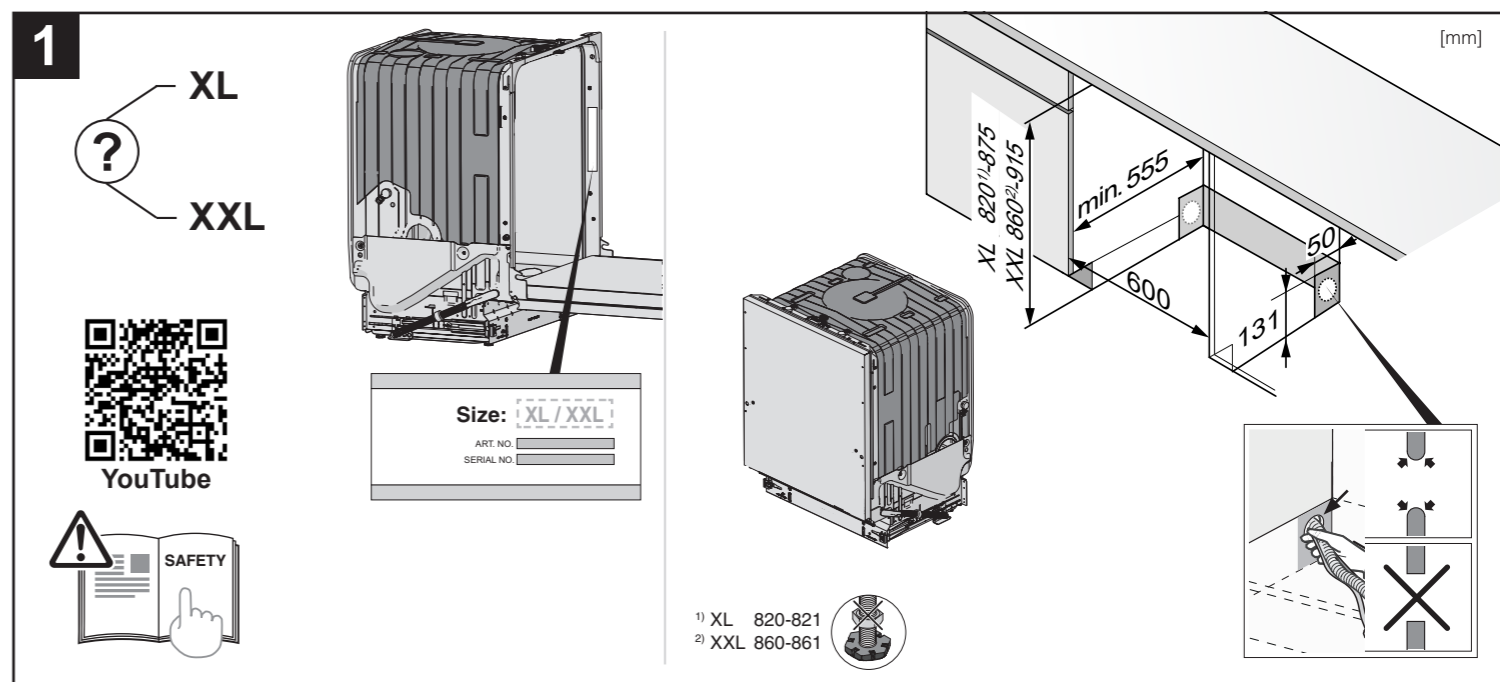